


# Installation Method

---

## Wooden flooring

- ① Remove connector from the bottom of the main body and install it with the top screw hole facing outward.
- ② Install connector in place with provided screws.
- ③ Install main body onto the connector.

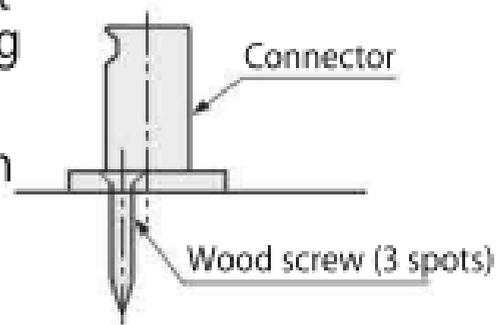

## Concrete flooring

- ① Punch all-anchor (optional) into the flooring.
- ② Remove connector from the bottom of the main body and install it with the top screw hole facing outward.
- ③ Install main body onto connector.

